


STEP 1

Unpacking and Positioning your F1200 UPS Portable Power Station

1. Carefully unbox and lift your UPS Portable Power Station from its box. The unit is heavy, handle with care.
2. Choose a suitable location you would like to position the UPS Portable Power Station, ensuring there is at least 200mm of clearance around the unit for proper ventilation.

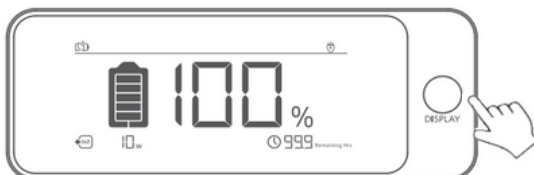

STEP 2

Turning the Power ON


To activate your UPS Portable Power Station, plug the AC charging cable into a wall outlet. The unit will automatically power on when the AC outlet switch is turned on. When the "Remaining Battery" indicator shows on the LCD screen, your power station is ready to charge devices.

- When powered on, press the DISPLAY button to turn the screen on or off.
- The power station will power off automatically if the output buttons are turned off and no power loads are detected for 12 hours.

STEP 3


Connecting the Uninterruptible Power Supply (UPS) Feature

To use the UPS feature, connect your power station to a wall outlet with the AC charging cable, then press the AC outlet button and connect your devices via the UPS AC outlet ports. With the UPS connection, your devices will be powered via bypass charging.

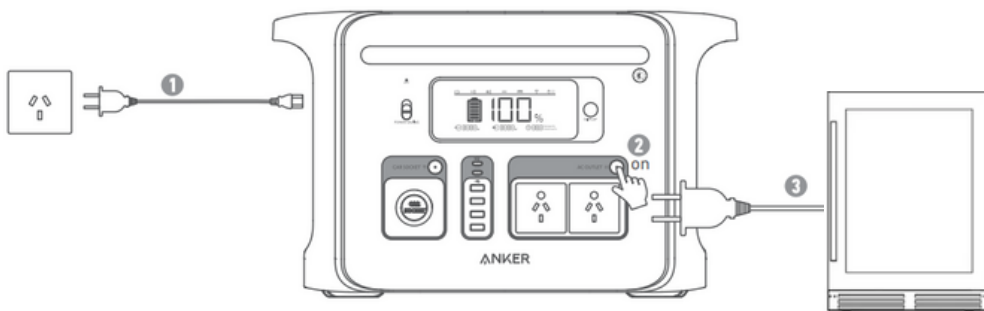

STEP 4

Adjusting the Light Levels

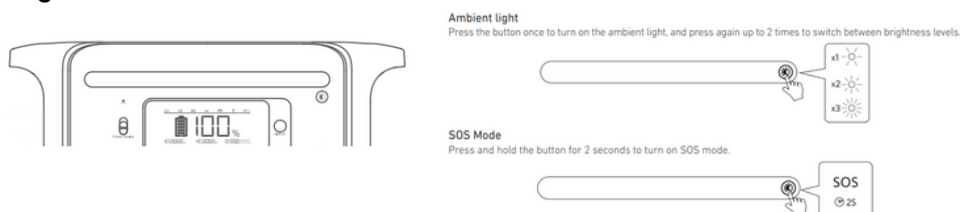

For more detailed instructions, please refer to the Anker SOLIX F1200 User Manual available on our website.