

STEP 1

Unpacking and Positioning your F2600 UPS Portable Power Station


1. Carefully unbox and lift your UPS Portable Power Station from its box. The unit is heavy, handle with care.
2. Choose a suitable location you would like to position the UPS Portable Power Station, ensuring there is at least 200mm of clearance around the unit for proper ventilation.



STEP 2

Turning the Power ON


To activate your UPS Power Station, plug the AC charging cable into a wall outlet. The unit will automatically power on when the AC outlet switch is turned on. When the "Remaining Battery" indicator shows on the LCD screen, your power station is ready to charge devices.

	<ul style="list-style-type: none">• When powered on, press the DISPLAY button to turn the screen on or off.• The auto-off time can be set in the Anker app.• The power station will power off automatically if the output buttons are turned off and no power loads are detected for 12 hours. The standby duration can be set in the Anker app.
---	--

STEP 3

Connecting the Uninterruptible Power Supply (UPS) Feature

To use the UPS feature, connect your power station to a wall outlet with the AC charging cable, then press the AC outlet button and connect your devices via the UPS AC outlet ports. With the UPS connection, your devices will be powered via bypass charging.

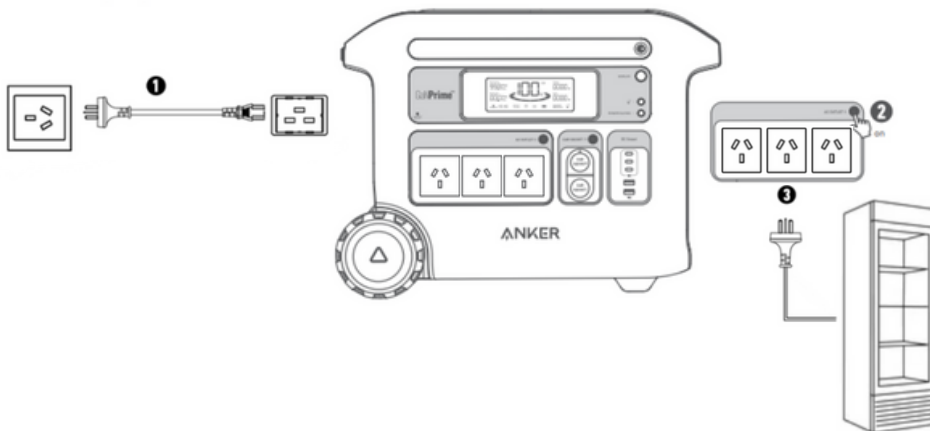

STEP 4

Download the Anker APP for Smart Control

You can remotely control your power station using the Anker APP.

1. Download the Anker APP from the APP store (iOS devices) or Google Play (Android devices), or by scanning the QR code.



2. Connect the device to a network before using the app for the first time. After connecting successfully, you can connect your device off-grid.

3. Firmware update: You will be informed once a new firmware version is detected when you connect the power station to the app. During the update, ensure the power station is being charged and connected to Wi-Fi.

Light

Turn ON/OFF the light on Anker APP.



Ambient light

Press the button once to turn on the ambient light, and press again up to 2 times to switch between brightness levels.




SOS Mode

Press and hold the button for 2 seconds to turn on SOS mode.



Connect an Expansion Battery OPTIONAL

Your power station can be connected with expansion battery to increase the capacity to from 2560-5120Wh. Please refer to the user manual of Anker SOLIX BP2600 Expansion Battery for detailed instructions.

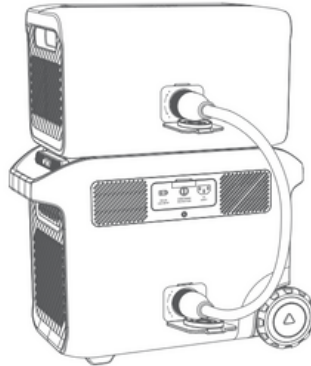

 For more detailed instructions, please refer to the Anker SOLIX F2600 User Manual available on our website.